How to install the ceilling shower head

Step 1: Fasten the white frame to the ceiling with exploding

power outlet

Measure and draw the sizes of 4pcs holes for embedded box on ceiling
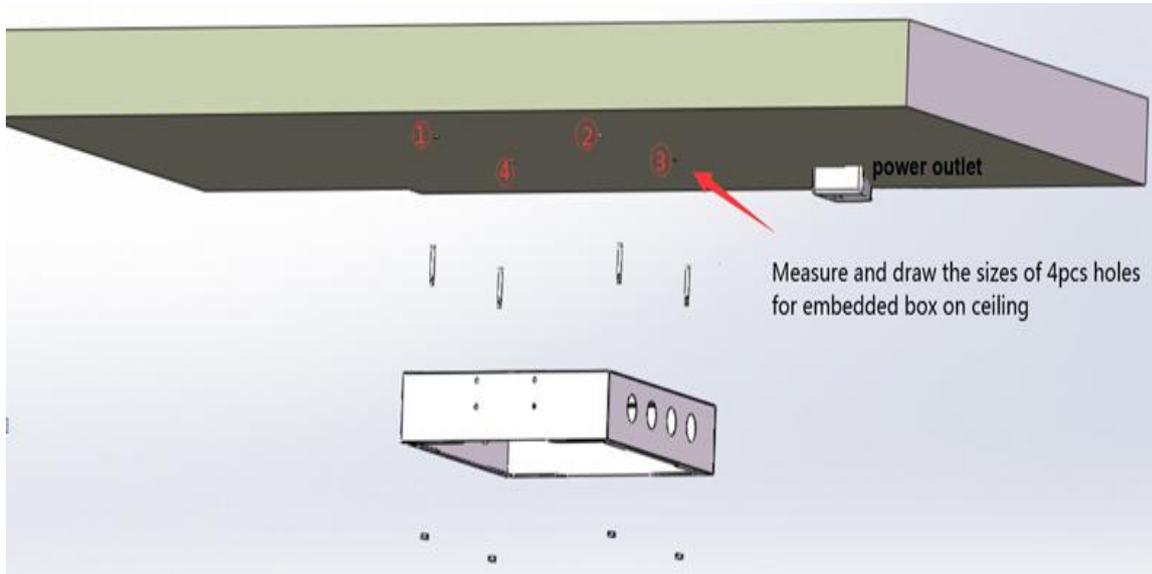
## Step 2: Useing these 4 screws in the red circle of
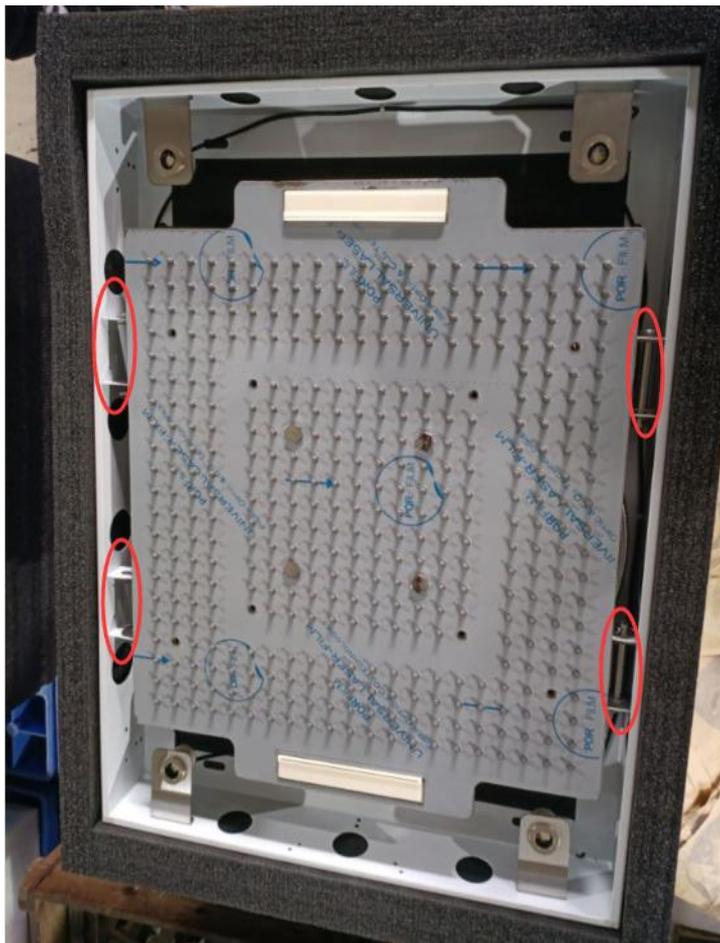
Step 3: Take off the decorative panel from the board

Back side face
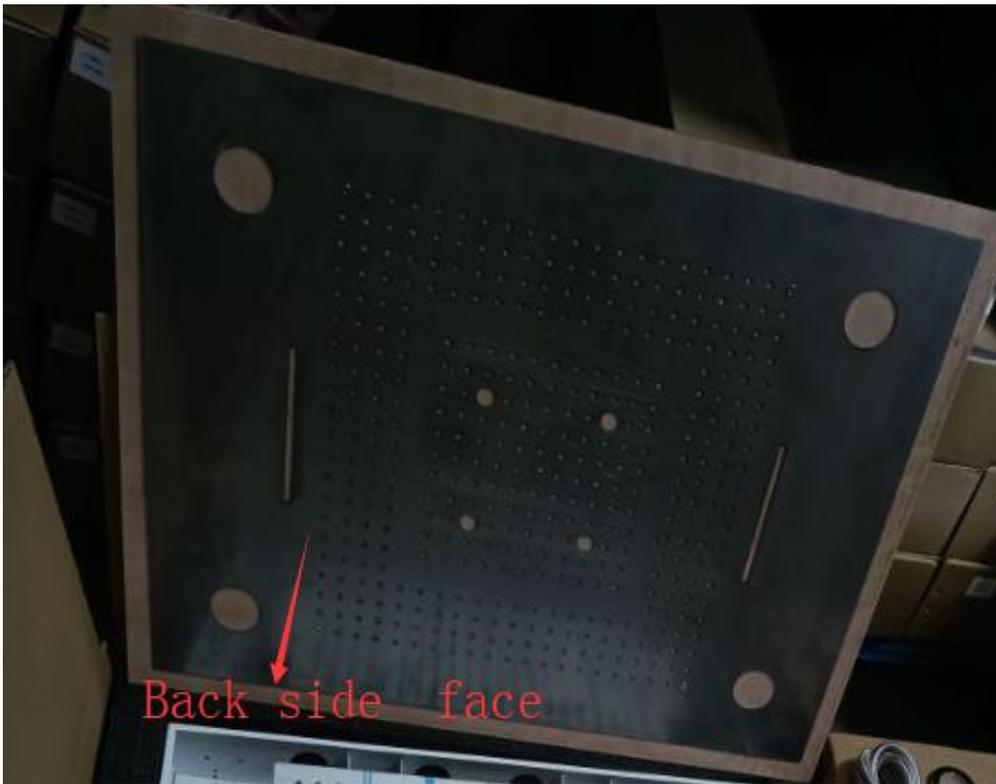
Step 4: Put this lamp cover on the front side of decorative panel

Step 5: Put this part on the back side of decorative panel to

clockwise
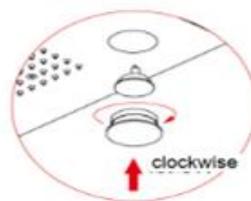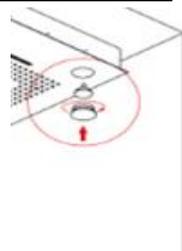
Step 6：Use the screw to install the decorative panel to the

clockwise

SW4
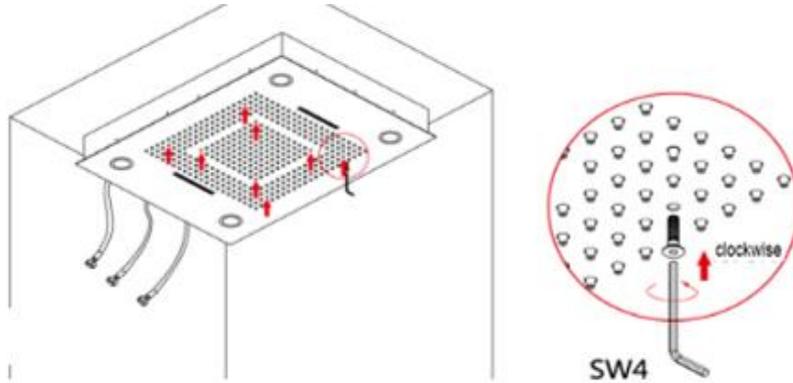
Install the decorative panel,use SW4 hexagen wrench tighten 8 screws.

Step 7：Connect the shower head to the pipe(Kindly reminder:before connecting pipes ,please clean the water

connect with the watertub in wall

clockwise
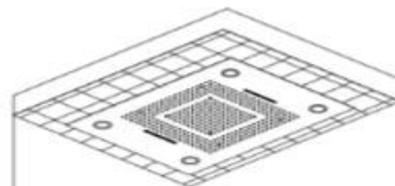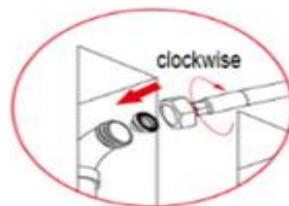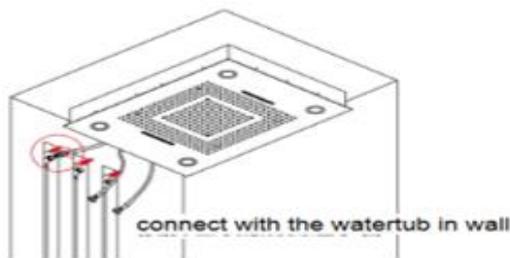
Connect the 3 braided hoses with the embed mixed water inlet pipe
Bury and seal the wall, and finally finish the shower head installation.

Note: 1.Before connect water hose and watertube,cleaning the pipes,
      prevent impurities from water pipes clogging flower is aspersed;
      2.When connect watertube,put a G1/2 filternet in water hose,filtering impurities.

About how to install the LED :
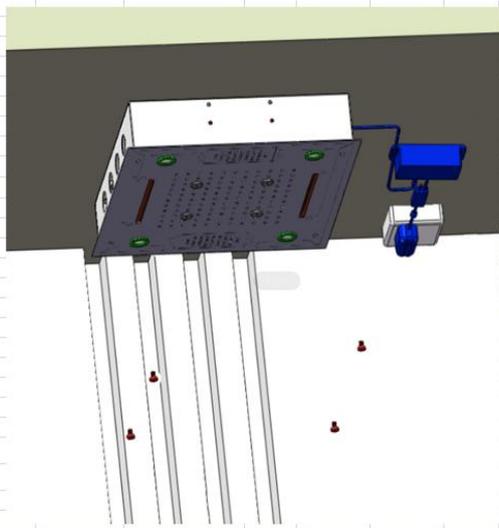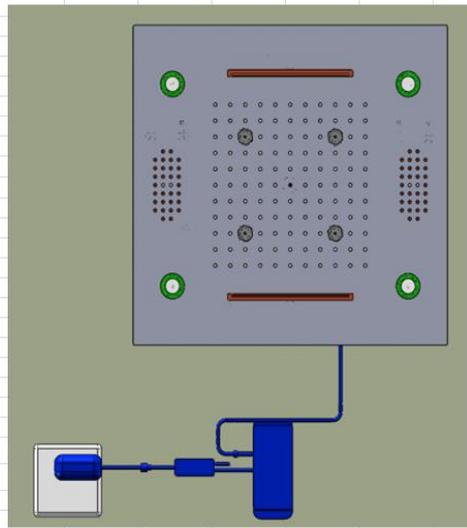
The details, please
see the below: